210mm

290mm

Comfort Zone.

CZ2062 Series

Model - CZ2062

Infrared Cabinet Heater With Remote

Features:

- 2 heat settings & energy saving ECO mode
- 12-hour on/off timer
- Electronic controls
- Built-in USB Charging Ports
- Fan-forced for wide heat dispersion
- Grounded Cordset
- Safety tip-over switch
- Safety overheat protection system
- 120V AC / 60Hz / 12.5A

Save These Instructions

www.comfortzoneproducts.com

晚白 尺寸：420X290

Comfort Zone.

LIMITED WARRANTY

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, to Mr. Brands LLC for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than Mr. Brands LLC are not covered in this warranty. Mr. Brands LLC will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Manufactured for:
Mr.Brands LLC
113 Fillmore St
Bristol, PA 19007
1-877-420-7555
www.mrbrands.com
www.comfortzoneproducts.com

WARNING:
Cancer and Reproductive Harm –
www.P65Warnings.ca.gov

Rev. 07/20/2023

Comfort Zone.

PRODUCT DIAGRAM:

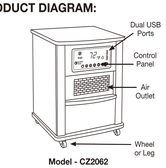

Model - CZ2062

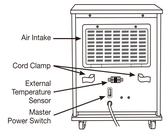



Model - CZ2062

1. Signal-receiving window: for receiving remote control signal.
2. Digital display indicates set room temperature or time value of the timer.
3. Power indication light: indicates when the unit is connected to power supply and rear master power switch is on.
4. ON/OFF switch button: for power-on or off.
5. Mode button: for selecting the running mode.
6. High power mode indication light: the light is on when high power mode is set.
7. Low power mode indication light: the light is on when low power mode is set.
8. Energy-saving mode: the light is on when energy-saving ECO mode is set.
9. Temp up button: to increase set temperature.
10. Temp down button: to reduce set temperature.
11. Timer indication light: the light is on when timer mode is set.
12. Timer button: used for setting the timer and adjust time value for the timer.
13. °C/°F Button: (Button for alternating between Fahrenheit and Celsius).
14. Celsius indicator light.
15. Fahrenheit indicator light.
16. Control panel lock button.
17. Control panel lock indicator.
18. Dual USB Ports

REMOTE CONTROL:



Mode: Used for mode selection.
Power Button: Used for power-on or power off.
Temp Up: To make temperature higher.
Temp Down: To make temperature lower.
Timer Button: Used for setting timer and adjusting value of the timer.

Remove clear insulating film from remote control battery before remote control use



To replace remote control battery, insert 1pc CR2025 battery



PREPARATION

Place the heater on a firm, level surface and plug into a grounded 120 Volt AC 60Hz power outlet and turn on the power switch in the rear of the unit. You will hear a tone when master power switch is turned on. Only operate heater in upright position.

BUILT-IN USB CHARGING PORTS

The dual USB charging port is designed as a DCP (Dedicated Charging Port) to industry-standard protocol per the USB Battery Charging 1.2 Compliance Plan. Early-generation or smaller consumer electronics typically accept one (1.0) Amp of power during charging. However, newer electronics, such as the Apple iPad®, other tablets and larger devices can accept and, in some cases, require up to 2.1 Amps of power to charge and operate. As a high power DCP, these ports can provide up to 2.1 Amps of power to charge any USB device, including the higher demand products. USB ports have power when the heater is plugged in and the master power switch is on with the unit in any mode.



Do not allow wires to dangle in front of heater output vent. Damage to the wire, device or heater may result.

Comfort Zone.

OPERATING INSTRUCTIONS

1. Silent and select working mode

When turned on, the heater will be in the silent mode. Press the power button on the control panel or by pressing the POWER button on the remote control. Once power is off, heating elements will stop working at first. Fan will continue working up to 2 minutes to emit residual heat inside the unit.	After starting up the unit, press the power button on the control panel or remote control. Digital display changes from set temperature to the value for the timer. Each press of the timer button will increase the timer length by 1 hour up to 12 hours. To cancel the timer, cycle through the lengths until the value is "00".
Select a heat setting. Press the MODE button to toggle between the two settings and energy saving ECO mode.	The timer light is on when timer-power-off is set.
High Mode uses 1,500W, Low Mode uses 1,000W. ECO mode is an Economic Energy Saving Function. Will set the temperature automatically at 68°F (20°C) under this mode.	**4. Setting timer-power-on** **Note:** ONLY when power-off code can you set timer-power-on function. Plug the unit into a wall outlet. **CAUTION:** DO NOT let liquid enter the heater.
2. Setting room temperature	1. Plug the unit and let it cool completely. 2. Turn off the power switch on the rear of the unit. 3. Keep the heater cleaned. The unit will need cleaning, dry the unit with a soft cloth. **CAUTION:** DO NOT let liquid enter the heater. 4. Check if the battery in the remote control is not dead and if the insulating film is pulled out. 5. Check if the power switch at the back of the unit is on.
Adjust the thermostat by pressing the arrows on the control panel or remote control.	**MAINTENANCE:**
Set temperature indication varies range 59°F to 86°F, or from 15°C to 30C°. Once you have chosen the desired temperature, the heater will remain on until the room temperature increases to the temperature on the digital display. The heater will cycle on and off to maintain the desired room temperature.	**CARE AND MAINTENANCE**
3. Setting timer-power-off	**OVERHEAT SAFETY FEATURE:** The heater is equipped with a overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheat and possible fire, the heater will automatically shut off to reset. Turn heater on and switch timer power switch on for over 10 seconds. Unplug the heater back into the wall outlet and turn master switch and on/off switch to on.
After starting up the unit, press the timer button on the control panel or remote control.	**TIP-OVER SAFETY FEATURE:** This heater is equipped with a tip-over safety switch. When heater is tipped over, an internal switch will automatically shut down the unit. Place the heater back to an upright position, the heater will reset. To continue operation, turn on the heater.
Digital display changes from set temperature to the value for the timer. Each press of the timer button will increase the timer length by 1 hour up to 12 hours. To cancel the timer, cycle through the lengths until the value is "00".	**PROTECTION:** Keep original carton for storage of the heater. If the unit needs repair or service, please check the following before seeking repair or service.
The timer light is on when timer-power-off is set.	**TROUBLESHOOTING:**
4. Setting timer-power-on **Note:** ONLY when power-off code can you set timer-power-on function. Plug the unit into a wall outlet.	**WARNING:** Keep your heater only with a working smoke detector located in the vicinity of your heater.
1. Plug the unit and let it cool completely. 2. Turn off the power switch on the rear of the unit. 3. Keep the heater cleaned. The unit will need cleaning, dry the unit with a soft cloth. **CAUTION:** DO NOT let liquid enter the heater. 4. Check if the battery in the remote control is not dead and if the insulating film is pulled out. 5. Check if the power switch at the back of the unit is on.	**WARNING:** Risk of fire, overheating, malfunction, property damage, injury or death.
MAINTENANCE:	**IMPORTANT SAFETY FEATURES**
CARE AND MAINTENANCE	**REPAIR:** DO NOT OPERATE THE HEATER WITHOUT THE GRILLE IN PLACE. DO NOT USE THE HEATER IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY. RETURN HEATER TO AUTHORIZED FACILITY FOR EXAMINATION, ELECTRICAL OR MECHANICAL ADJUSTMENT OR REPAIR.
OVERHEAT SAFETY FEATURE: The heater is equipped with a overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheat and possible fire, the heater will automatically shut off to reset. Turn heater on and switch master power switch on for over 10 seconds. Unplug the heater back into the wall outlet and turn master switch and on/off switch to on.	**STORAGE:** Keep original carton for storage of the heater.
TIP-OVER SAFETY FEATURE: This heater is equipped with a tip-over safety switch. When heater is tipped over, an internal switch will automatically shut down the unit. Place the heater back to an upright position, the heater will reset. To continue operation, turn on the heater.	**INTENDED USE:**
PROTECTION: Keep original carton for storage of the heater.	This product is intended for indoor residential and office use only. Use your heater only in dry environments. The heater is not intended for use in a bathroom, laundry area, or similar locations, or near sink, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water containers. Do not use in damp environments such as flooded basements.
WARNING: Keep your heater only with a working smoke detector located in the vicinity of your heater.	**WARNING: SHOCK HAZARD**
WARNING: FIRE HAZARD	Use your heater only in dry environments. The heater is not intended for use in a bathroom, laundry area, or similar locations, or near sink, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water containers. Do not use in damp environments such as flooded basements.
Risk of fire, overheating, malfunction, property damage, injury or death.	**WARNING: SHOCK HAZARD**
WARNING: HOT SURFACES	Use your heater only in dry environments. The heater is not intended for use in a bathroom, laundry area, or similar locations, or near sink, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water containers. Do not use in damp environments such as flooded basements.
Do not touch body of heater when in use. This heater is not warm in use, to avoid burns, do not let bare skin touch on surfaces, if provided, use handles when moving the heater.	**WARNING: SHOCK HAZARD**
WARNING: FIRE HAZARD	Use your heater only in dry environments. The heater is not intended for use in a bathroom, laundry area, or similar locations, or near sink, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water containers. Do not use in damp environments such as flooded basements.
Risk of fire and injury or burning danger. Do not place any flammable materials such as fabrics, bedding, paper, clothes, curtains or other flammable materials within 3 feet (1 m) from the front of the heater and keep them away from sides and back of the heater. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater. Do not insert or allow foreign objects or other any substances or accessories into the heater. Do not use in wet locations, like in a bed, where openings may become blocked.	**WARNING: LITHIUM BATTERY COIN CELL SAFETY**
WARNING: Lithium battery coin cell or button cell batteries can be extremely dangerous if swallowed. Swallowing lithium coin batteries can in severe cases may cause death. Lithium coin batteries must be removed from the unit and disposed of safely. Keep replacement batteries out of reach of children. If you think a battery has been swallowed or placed inside any part of the body, seek immediately medical attention. Keep children away from the battery. Do not let children play with the battery. Do not let children put the battery in their mouth. Do not let children put the battery near their eyes and ears. Do not let children put the battery near any other parts of the body. Do not let children put the battery near any other parts of the body. Do not let children put the battery near any other parts of the body